

LED Bilinear Contemporary Sconce Item# XDUXL41315SPAAFX



Construction:

- The ballast/wiring channel is formed from 22-gauge steel and is provided with keyhole mounting slots and wiring access
- An internal divider provides separate lamp compartments for controlled uplight and downlight
- The decorative bands are 0.060 in thick aluminum extruded bands that are screwed to vertical supports
- Power connections can be made in the fixture wiring channel or in a standard junction box (not included).

Finish:


- Solid wood accent

Diffuser:

- Laminated fabric/acrylic front shade
- White acrylic closed bottom and top diffuser

Electrical:

- Direct wired with a constant current LED driver rated for 120-277V
- Compatible with residential (TRIAC/ELV)
- Commercial (0-10V) dimmers
- TRIAC and ELV dimming only at 120VAC

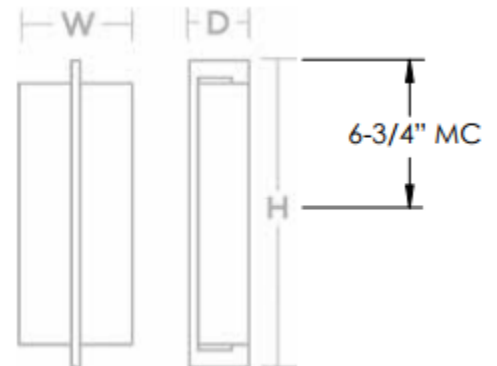

Certification:

- All fixtures are cULus listed for damp locations

Lamping:

- 4 - modules (15W) producing 1400 source lumens
- 2700K or 3000K (CCT)
- Rated for 50,000 hrs.

Warranty:

- 5 Year Limited Factory Warranty



Ordering Specifications:

Espresso
SE-SEDU72L0041315SPAAFX
SE-SEDU03L0041315SPAAFX

Weathered Grey
GW-SEDU72L0041315SPAAFX
GW-SEDU03L0041315SPAAFX

Jute
TJ-SEDU72L0041315SPAAFX
TJ-SEDU03L0041315SPAAFX

Linen White
WL-SEDU72L0041315SPAAFX
WL-SEDU03L0041315SPAAFX

Lumens	LED	Color Temp.	Driver	H	W	D	MC
1400	L	27 2700k	UD Voltage (120-277V UD)	13-1/2"	5"	3"	6-3/4"
1400	L	30 3000K	UD Voltage (120-277V UD)	13-1/2"	5"	3"	6-3/4"



Jute



Linen White



Espresso



Weathered Grey

